

Category	Laser machine
OS	N/A
Revision	V1.0
Model	All
Date	2024/3/6

Main Board Power Supply

To check voltage on power supply, please open the side cover to get access to the power supply.
The connector port are labeled on Power supply



There are 2 different output voltage on this power supply (V1 & V2)




AC
input

Ground

V2 DC
output

V1 DC
output


Use a voltage meter to check on V1/V2 output separately

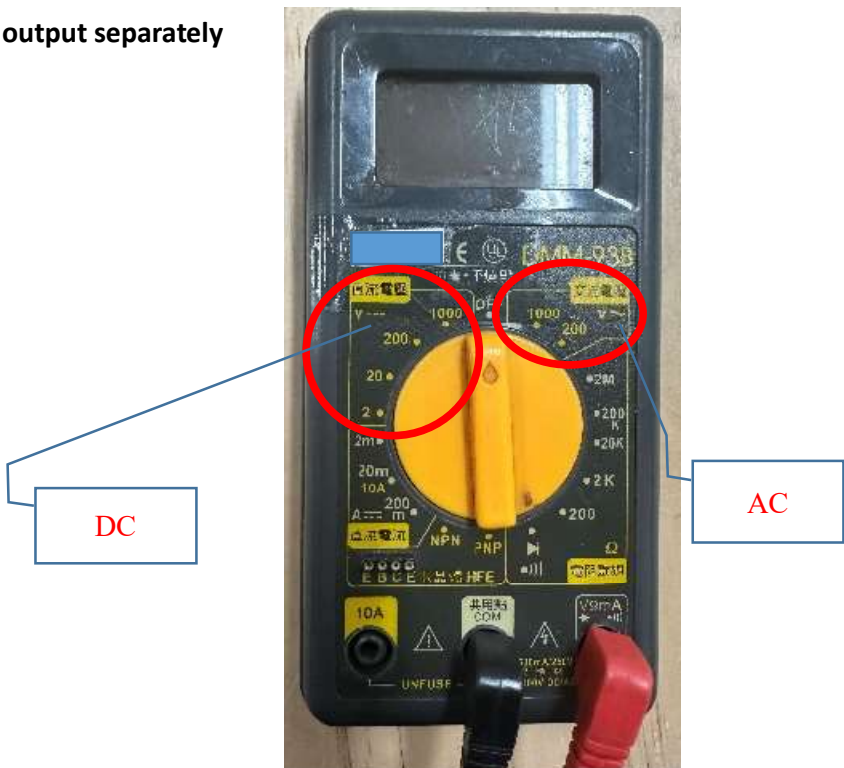



Unplug the power connector on main board. Switch ON the machine.

Place COM pin (black) on one of screw on chase and set the red pin on V1 screw to measure V1 voltage. Below picture shows 40.1V.

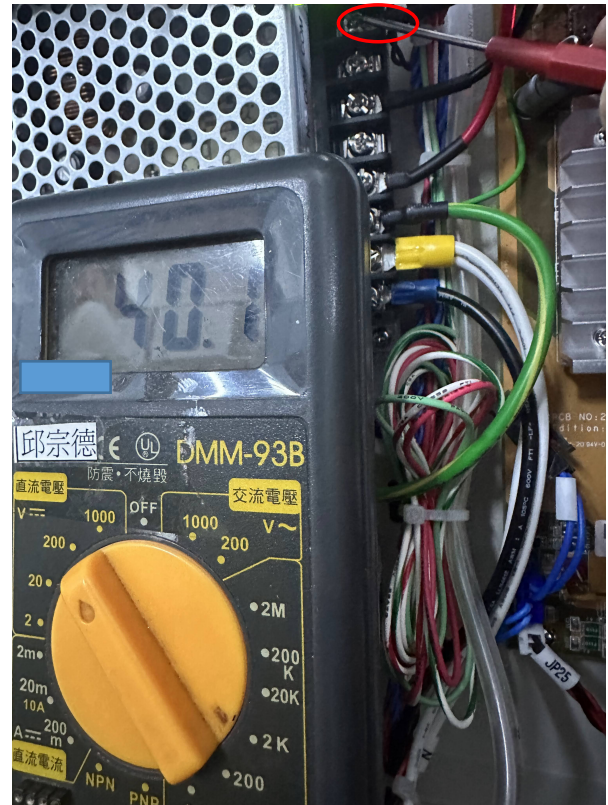



Measure on V2. Below picture shows 4.9V

Switch off the machine and plug back the power connector on main board



Power ON the machine and measure both V1 & V2 again to ensure voltage is not drop down when loading is added.

www.GCCworld.com



GCC Headquarters	4F., No.236, Fude 2nd Rd., Xizhi Dist., New Taipei City 22151, Taiwan	886-2-6616-6692	Fax : 886-2-2694-6875
GCC China	No.1, Chen Feng Road, Yushan, Kunshan, Jiangsu 215300, China	86-512-5726-1515	Fax : 86-512-5726-1518
GCC Europe B.V.	Eglantierbaan 43-45, 2908 LV, Capelle a/d IJssel, The Netherlands	31-10-458-9367	Fax : 31-10-451-9874
GCC America, Inc	323 Paseo Tesoro, Walnut, CA 91789, USA	1-909-718-0248	Fax : 1-909-718-0251
		US & Canada Only	Toll Free: 1-888-284-5211