

200

Compact, multi-use fume extraction unit

PUREX

CLEAN AIR FOR EVERYONE



Description & features

- Clear & informative graphic display
- Highest grade HEPA and carbon technology
- Automatic electronic flow control - maintains a constant extraction rate even as the filter blocks
- Gas and particle sensors to warn the operator
- Adjustable airflow

Filters



Main Filter Code

113505C

Description

HEPA/Chemical



Pre-Filter Code

200025

Description

F5 Pad

Specification

Voltage	120v	230v
Volume Part Number	OLX2101D	OLX2100D
Vacuum Part Number	081026D	080026D
Wattage	0.5kW	
Frequency	50Hz / 60Hz	
Cabinet Height	710mm	
Cabinet Width	465mm	
Cabinet Depth	528mm	
Cabinet Weight	50kg	
Airflow	200m3/h	
Sound Level	<60dBa	

Machine supplied with

- 1 x Main Filter • 1 x Pre-filter • 1 x Connection Kit • 1 x Power Cable • 1 x Manual



W : FumeFiltration.com | Jorlink.com T: (336) 288-1613 |

E: sales@fumefiltration.com | E :sales@jorlink.com

Jorlink USA.Inc, 3714 Alliance Dr., Suite 100, Greensboro, NC 27407

Main filter

Code	Description	Code	Description
113508	Chemical	113668	HEPA / Twin Chemical
113505P	Chemical	113512	HEPA / Chemical (Cleanroom)
113809	HEPA	113669	HEPA / Chemical (Cleanroom)
113662	CSA Chemical	113505H	HEPA (Hydrophobic)
113579	HEPA / Twin Chemical	113513	Solvent Lock
	113531		Pleated Bag

Pre-filter

200524	F8 / F9 Pad
--------	-------------

Connection kits

If you do not see a connection kit that fits your machine or pipework, please contact Purex or your representative

100032

Hose End Diameter	Hose Length	Purex Inlet Diameter
50mm	3m	80mm

Connect to 50mm diameter pipe/port or Purex valve

3.0m

100043

Hose End Diameter	Hose Length	Purex Inlet Diameter
50mm	6m	80mm

Connect to 50mm diameter pipe/port or Purex valve

6.0m

100170

Hose End Diameter	Hose Length	Purex Inlet Diameter
80mm	1.5m	80mm

Connect to 32mm diameter pipe/port

1.5m

120299

Hose End Diameter	Hose Length	Purex Inlet Diameter
32mm	3m	80mm

Connect to 80mm diameter pipe/port

3.0m

Interfacing

Interfacing can remotely start the Purex machine when the connected machine starts.

Interfacing can also warn the connected machine when the Purex machine is in alarm.

Your Machine

10011010



10011010

Extractor

Take a look through our [Interfacing Guide](#) to see our extensive range of options