



**Step 2** Set the proper USB mode on both the machine and printer port setting of windows system according to following table :

Laser series	Loader version	Windows XP/Windows Vista/Windows 7	
		32 bit	64 bit
Spirit/LS/C180	New	GCC USB or Common USB mode	Common USB mode
	Old	GCC USB mode	X
SGX/GLS	New	GCC USB or Common USB mode	Common USB mode
	Old	GCC USB mode	X
Mercury		Parallel	X
Mercury II/III	New	GCC USB or Common USB mode	Common USB mode
	Old	USB mode	
S290/S290LS	New	GCC USB or Common USB mode	Common USB mode
	Old	USB mode	
X252/X380/X500	New	GCC USB or Common USB mode	Common USB mode
	Old	USB mode	
Gaia/Gaia II	New	GCC USB or Common USB mode	Common USB mode
	Old	USB mode	


- Machine setting
  - I. Press F4 button on control panel home page to enter Function page

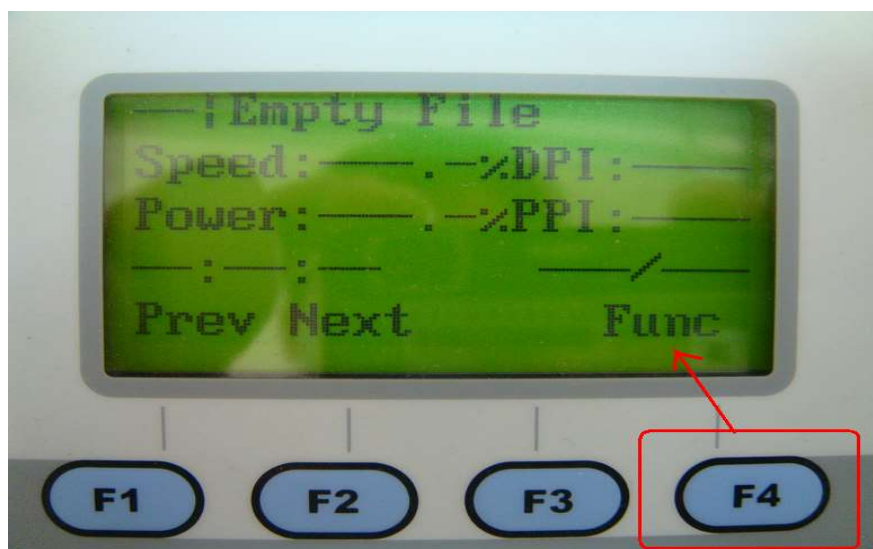


II. Select “Machine setting”

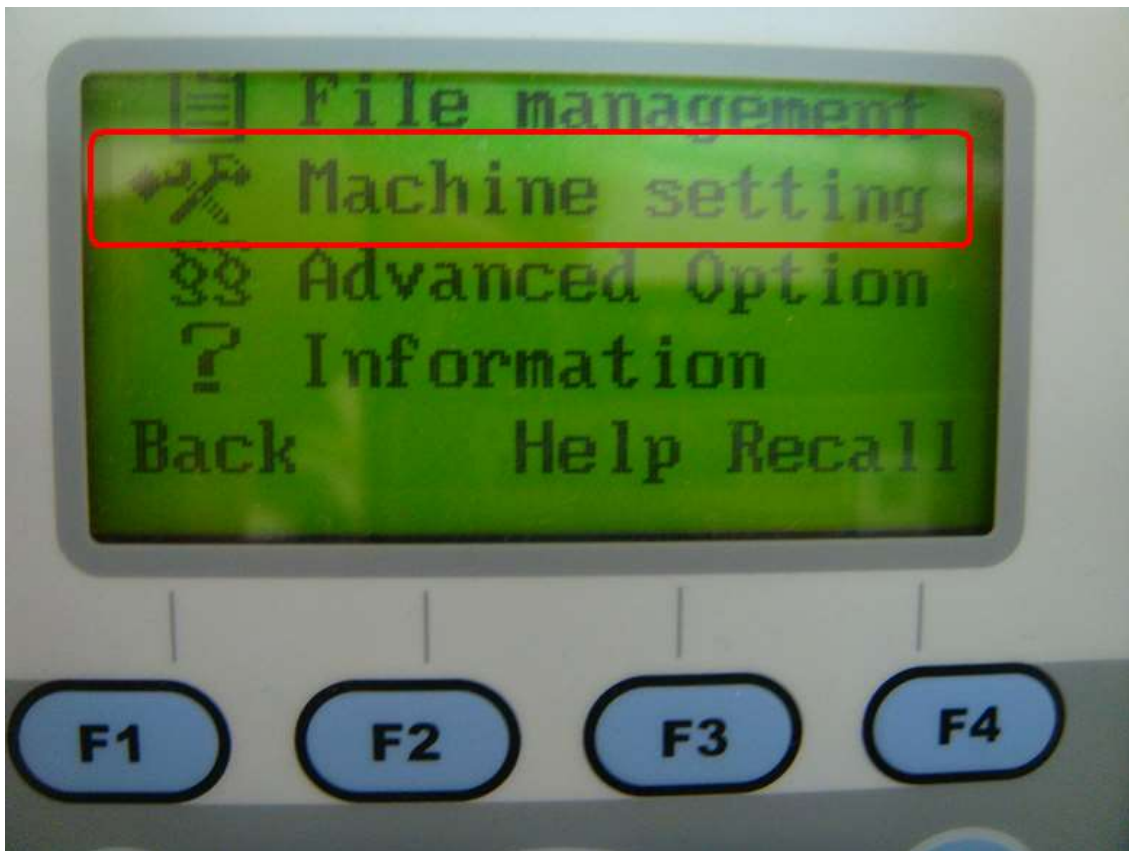

III. Select “Usb setup wizard”

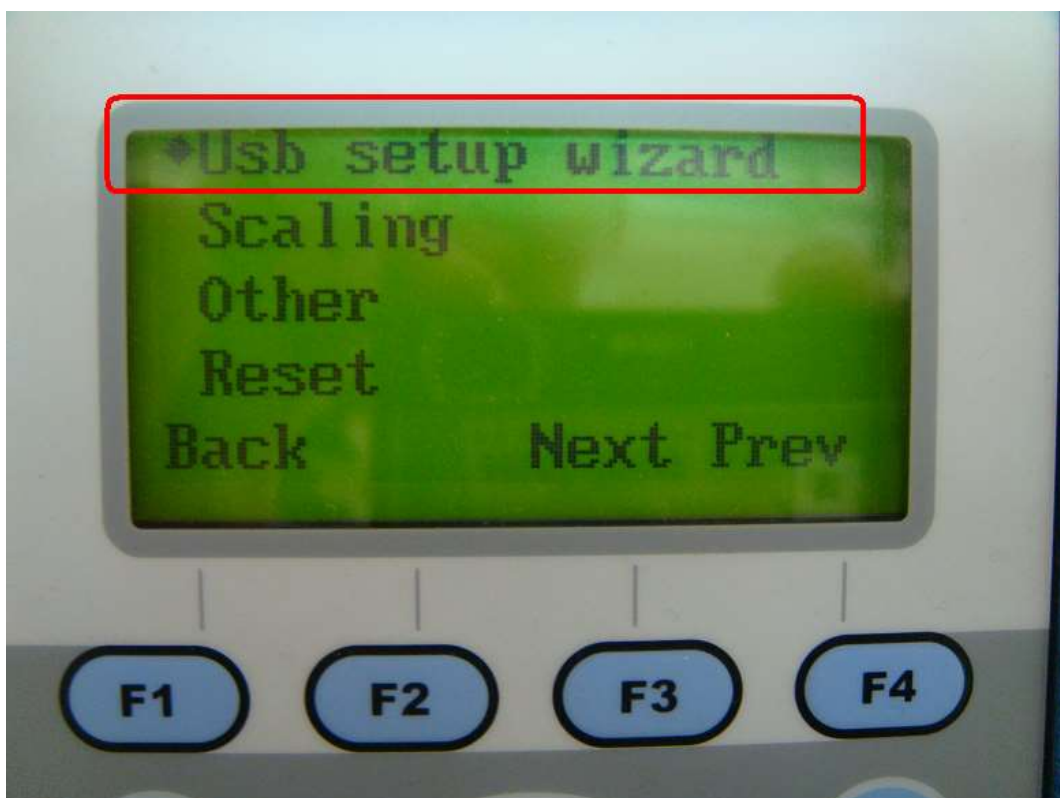

IV. Choice the USB mode you want to use and save it.

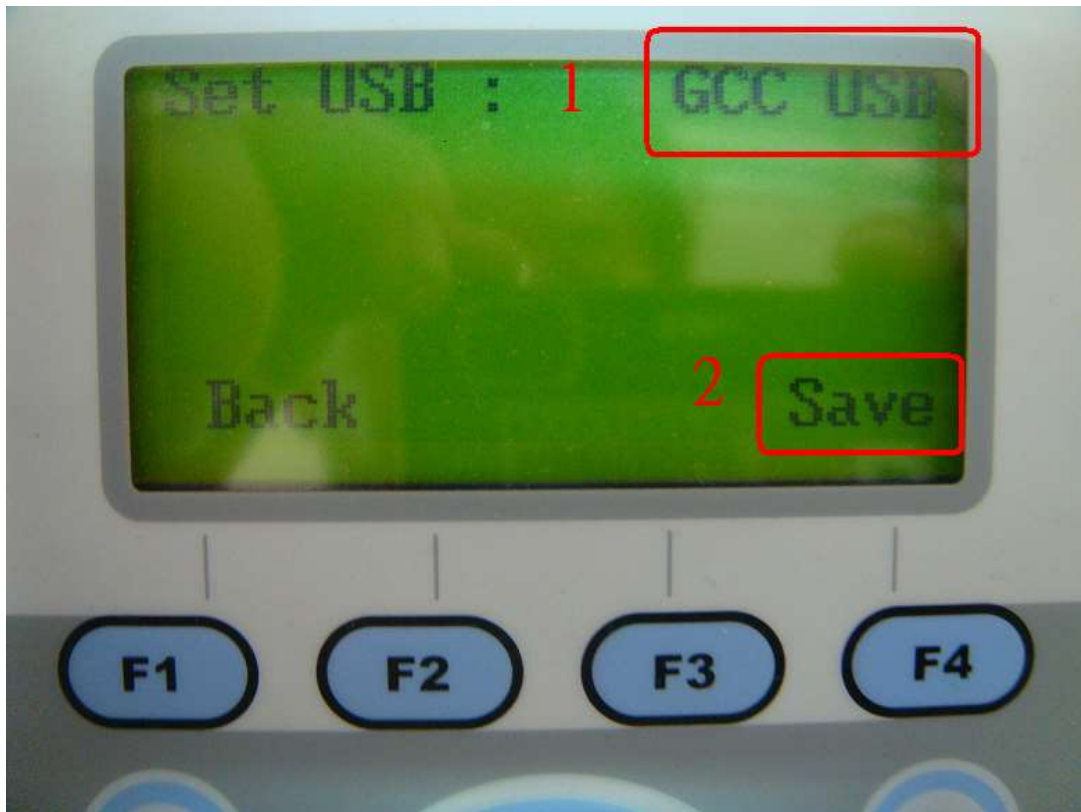

- **Printer port setting**

I. Start→Settings→Printers and Faxes to enter “printers page”

